


# INSTALLATION INSTRUCTIONS

## For #3056FS-EMI /3557FS-EMI

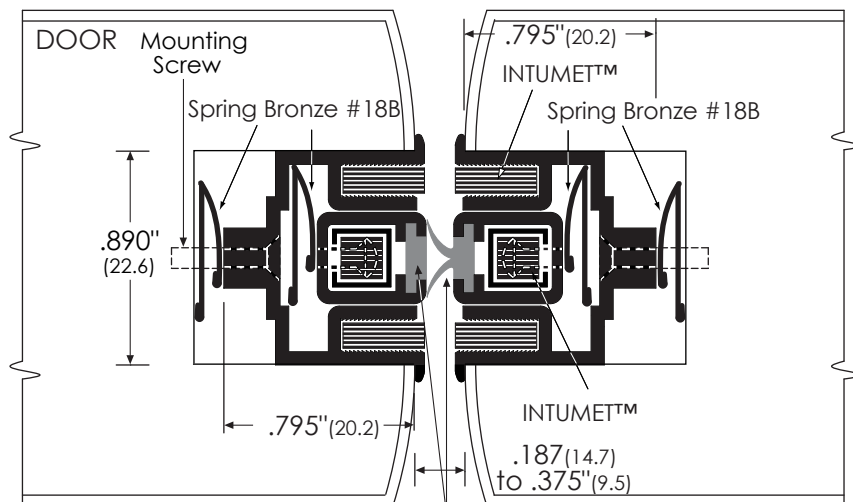

**#3056FS EMI**

**#3557FS EMI**



**1** Install #18B Spring Bronze inside the groove on both doors, position as shown on drawing. Secure using wafer head screws provided. (Do not use PSA.)

**2** Install #3056FS-EMI and #3557FS EMI.

### NOTE:

Conductivity = 0.00025 mho/ft.

$$R = \frac{1}{\text{conductivity}}$$

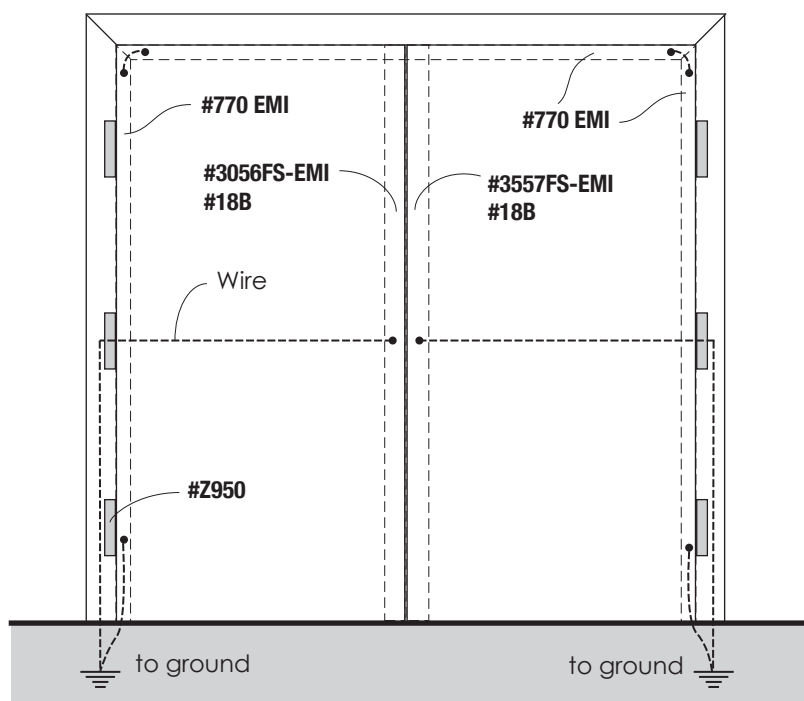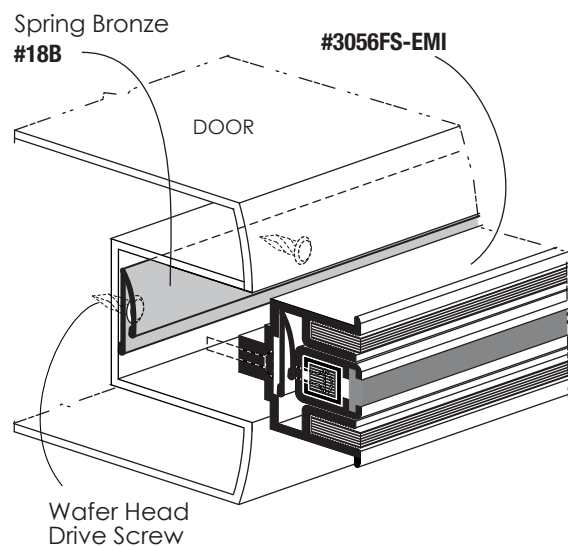

## ZERO INTERNATIONAL, INC.

415 Concord Avenue, Bronx, NY 10455-1004

Tel : 718-585-3230 • Fax : 718-292-2243

E-mail : zero@zerointernational.com

www.zerointernational.com